

Revolutionary products . . .

. . . for rebuilding, resurfacing and protecting all types of fluid flow machinery, equipment and structures.

ENECRETE®

DuraQuartz™

ENECRETE®
DuraQuartz™

Extraordinary Adhesion

Outstanding
Compressive Strength

100% Solids

Safe & Simple To Use


ENECRETE®
DuraQuartz™ is the professional's choice for repairing critical areas subject to shock, impact, abrasion and chemical attack such as: containment dikes and troughs; spillways; chemical loading, storage and transfer areas; pump bases; anchor bolts; setting and grouting tiles; etc..

The finest concrete repair and protection system available.

ENECRETE® DuraQuartz™ is a three component, 100% solids, concrete repair compound specifically formulated and precisely engineered to provide solutions to even the most difficult concrete repair and protection problems.

ENECRETE® DuraQuartz™ is extremely versatile. It can be mixed to any consistency - from a viscous liquid to a stiff mortar. DuraQuartz™ is not only for concrete; it will bond to marble, stone, slate, terrazzo, tiles, ...even metal!

- **Concrete**
- **Marble**
- **Stone**
- **Slate**
- **Terrazzo**
- **Tiles**
- **Metal**
- **Wood**

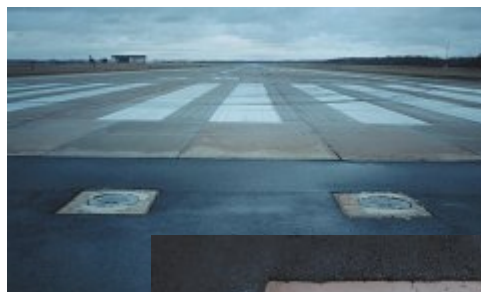

ENECRETE®

DuraQuartz™

www.enecon.com

ENECON Corporation
The Fluid Flow
Systems Specialists.

1-888-4-ENECON

Tel: 516 349 0022 · Fax: 516 349 5522

email: enecon@enecon.com

700 Hicksville Road · ENECON Center · Suite 110 · Bethpage, NY 11714-3496

Technical Data

Volume capacity per 15 kg.	400 in ³ / 6580 cc	
Mixed density	0.082 lbs per in ³ / 2.28 gm per cc	
Coverage rate per 15 kg. @ 0.25 in / 6mm	12 ft ² / 1.1 m ²	
Shelf life	Indefinite	
Volume solids	100%	
Mixing ratio	Base	Activator
By volume	5	2
By weight	2.6	1

Cure Times

Ambient Temperature	Working Life	Machining Light Load	Full Mechanical	Chemical Immersion
41°F 5°C	3 hrs	3 Days	7 days	10 days
59°F 15°C	90 min	6 hrs	36 hrs	7 days
77°F 25°C	60 min	4 hrs	24 hrs	4 days
86°F 30°C	30 min	3 hrs	16 hrs	3 days

Physical Properties

Physical Properties	Typical Values	Test Method
Compressive strength	15,500 psi 1085 kg/cm ²	ASTM C-109
Compressive modulus	640,000 psi 44,800 kg/cm ²	ASTM C-109
Compressive stress	13,000 psi 910 kg/cm ²	ASTM C-790
Flexural modulus	310,000 psi 21,700 kg/cm ²	ASTMD-790
Coefficient of Expansion	3.5x10 ⁻⁶ in/°C	ASTM D-696
Izod impact strength	0.5 ft lbs/in 0.27 j/cm	ASTM D-256
Hardness-Shore D	88	ASTM D-2240
Tensile shear adhesion - steel	1900 psi 133 kg/cm ²	ASTM D-1002
Elcometer adhesion - to cementitious and mineral type substrates is generally greater than the cohesive strength of such materials.		
Surface resistivity	1 x 10 ¹⁵ ohms	ASTM D-257
Volume resistivity	1 x 10 ¹⁵ ohm/cm	ASTM D-257
Electric strength	210 volts / mil	ASTM D-149
Dielectric constant	7.5	ASTM D-150

Chemical Resistance

Acetic acid (0-5%)	EX	Methyl alcohol	G
Acetone	G	Methyl ethyl ketone	G
Ammonia solution (0-10%)	EX	Nitric acid (0-10%)	G
Aviation fuel	EX	Palmitic acid	EX
Butyl alcohol	G	Phosphoric acid (0-5%)	EX
Calcium chloride	EX	Phosphoric acid (5-10%)	G
Crude oil	EX	Potassium chloride	EX
Diesel fuel	EX	Propyl alcohol	G
Ethyl alcohol	G	Sodium chloride	EX
Gasoline	EX	Sodium hydroxide	EX
Heptane	EX	Sulfuric acid (0-50%)	EX
Hydrochloric acid (0-10%)	EX	Tannic acid	EX
Hydrochloric acid (10-20%)	G	Toluene	G
Kerosene	EX	Transformer oil	EX
Lactic acid (0-10%)	G	Xylene	EX

EX - Suitable for most applications including immersion.
G - Suitable for intermittent contact, splashes, etc.

Your Local ENECON® Fluid Flow Systems Specialist

Using DuraQuartz™

Surface Preparation

ENECRETE® DuraQuartz™ should only be applied to clean, dry, firm and well roughened surfaces.

1. Remove all loose material and surface contamination
2. Depending on the surface, solvent clean and/or remove contamination by abrasive blasting, steam cleaning, pressure washing, or other suitable means.
3. After removing all surface and sub-surface contamination, flush the area as necessary and allow to dry completely.
4. Mix and apply DuraQuartz™ Primer in accordance with the Instruction Sheet supplied with the material.

Note: In situations where adhesion is not desired, such as when making molds and patterns or to ease future disassembly, apply a suitable release agent (mold release compound, paste wax, etc.) to the appropriate surfaces.

Priming The Surface - ENECRETE® Primer is supplied in each DuraQuartz™ system. Pour the contents of the Primer Activator container into the Primer Base container and mix thoroughly. Apply the mixed Primer to the area to be coated with DuraQuartz™ using a brush or a roller. Use only enough Primer to "wet" the surface; do not flood or pool the Primer. All the Primer should be used within 20 minutes of mixing. Overcoating with DuraQuartz™ should begin immediately after Priming and should be completed within two hours.

Mixing & Application - For your convenience, the ENECRETE® DuraQuartz™ Base, Activator and Aggregate have been supplied in precisely measured quantities to simplify mixing of full units. Should a small amount of material be required, measure out 5 parts Base and 2 parts Activator by volume (5:2, v/v) and add Aggregate until the desired consistency is achieved.

To facilitate mixing of full units, a mechanical mixing device is strongly recommended. Combine the Base and Activator liquids in the large, plastic bucket and, with the mixer running, slowly add the Aggregate. Using all the Aggregate will yield a stiff, mortar-like paste; less Aggregate will result in a viscous fluid consistency.

Apply the mixed DuraQuartz™ to the prepared and Primed surface using a trowel, putty knife, or other appropriate tool, pressing well to insure intimate contact and force out any air entrapped as a result of the mixing technique and/or device used.

Health and Safety - Every effort is made to insure that ENECON® products are as simple and safe to use as possible. Normal industry standards and practices for housekeeping, cleanliness and personal protection should be observed. Please refer to the detailed MATERIAL SAFETY DATA SHEETS (MSDS) supplied with the material (also available on request) for more information.

Cleaning Equipment - Wipe excess material from tools immediately. Use acetone, MEK, isopropyl alcohol or similar solvent as needed.

Technical Support - The ENECON® engineering team is always available to provide technical support and assistance. For guidance on difficult application procedures or for answers to simple questions, call your local ENECON® Fluid Flow Systems Specialist or the ENECON® Engineering Center.

All information contained herein is based on long term testing in our laboratories as well as practical field experience and is believed to be reliable and accurate. No condition or warranty is given covering the results from use of our products in any particular case, whether the purpose is disclosed or not, and we cannot accept liability if the desired results are not obtained.

Copyright © 1998 by ENECON® Corporation. All rights reserved. No part of this work may be reproduced or used in any form or by any means - graphic, electronic or mechanical including photocopying, recording, taping or information storage and retrieval systems - without written permission of ENECON® Corporation.